



# Fitting Instructions and Parts List

Part No.  
320591

Issue 6  
January 1979


## BL Components Ltd

Unipart House  
Cowley, Oxford OX4 2PG  
Telephone: Oxford (0865) 778966  
Telex: 83331  
Cables: UNIPART Oxford

### FRONT MUDFLAPS

Kit Part No. GLR 305


for all LAND-ROVERS

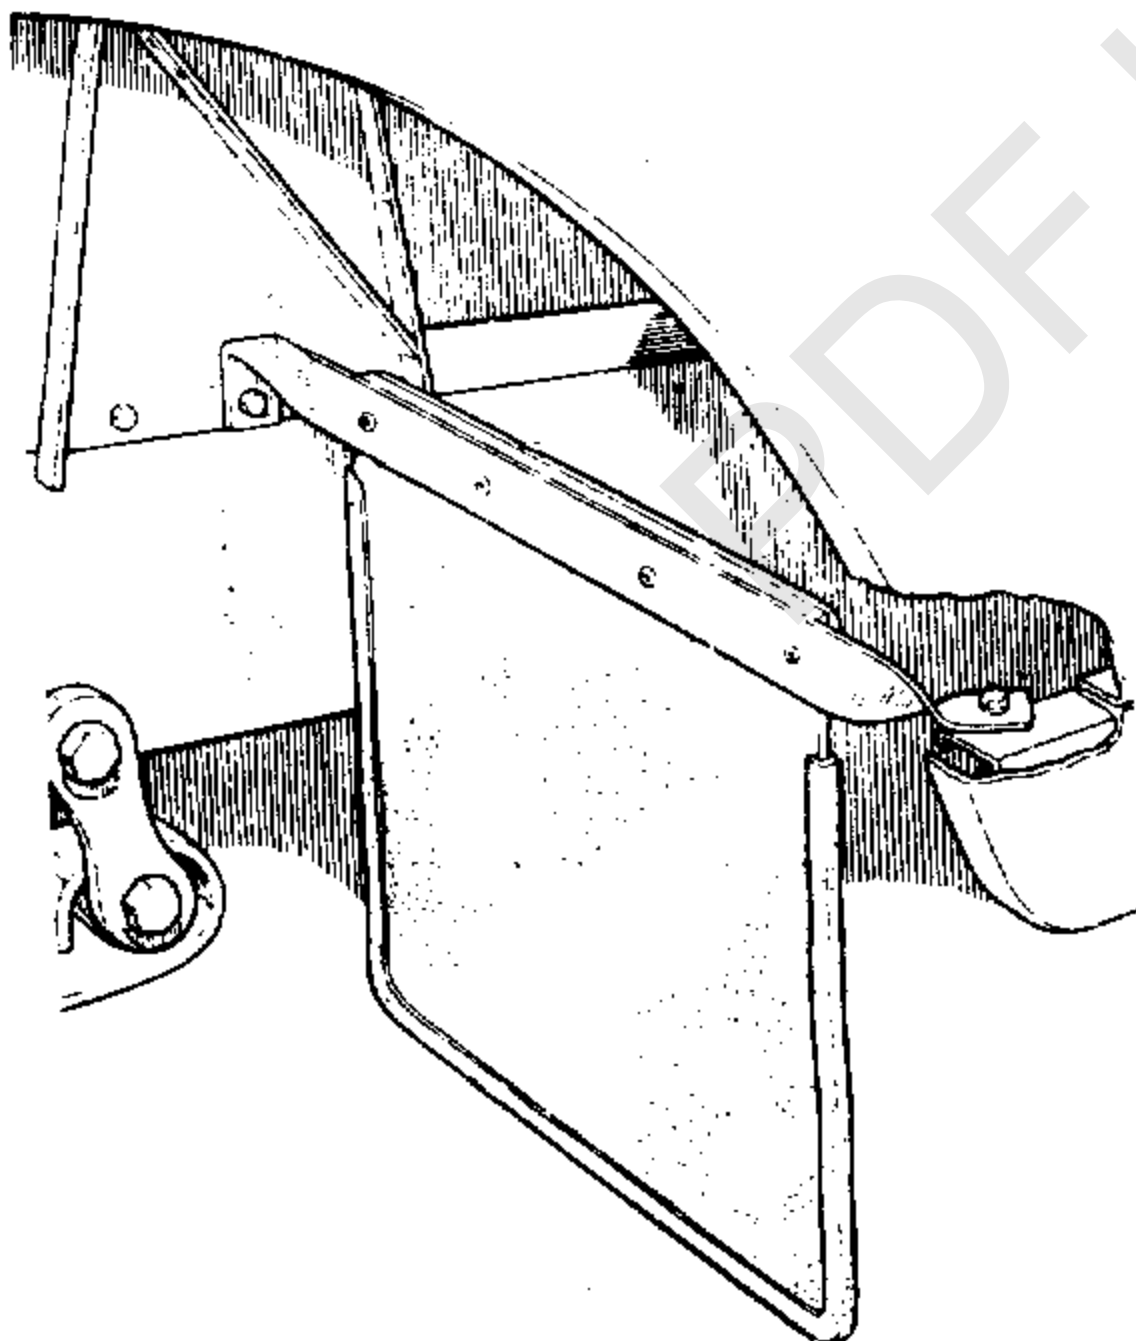

### REAR MUDFLAPS

Kit Part No. GLR 304

for 88" LAND-ROVERS

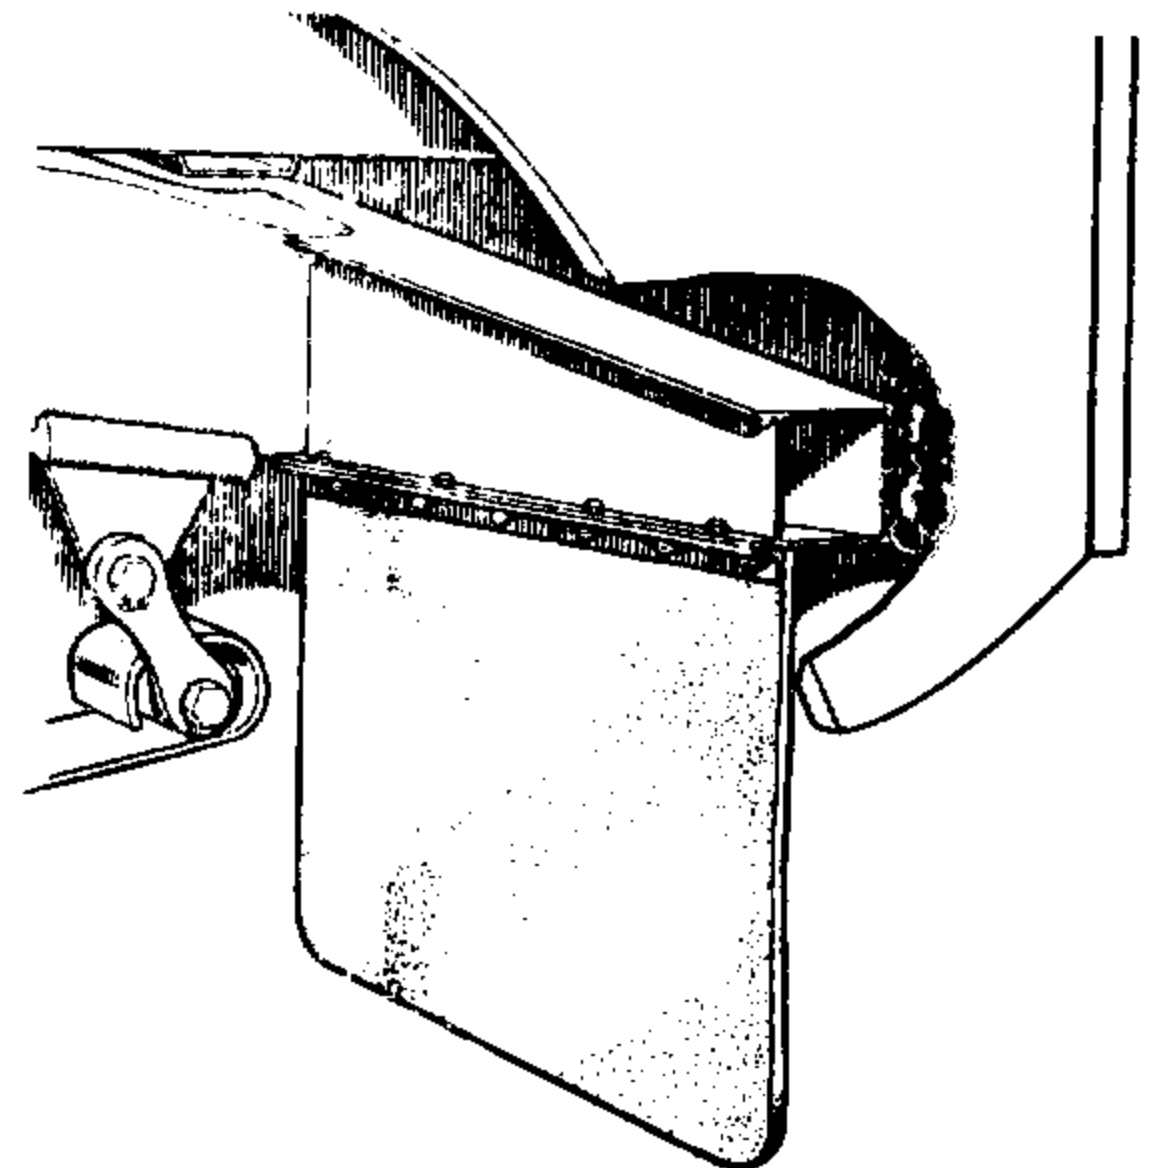

The Manufacturers reserve the right to vary their specifications with or without notice and at such times and in such manner as they think fit. Major as well as minor changes may be involved in accordance with the Manufacturers' policy of constant product improvement.

Whilst every effort is made to ensure the accuracy of the particulars contained in this Fitting Instruction, neither the Manufacturer nor the Distributor or Dealer by whom this Fitting Instruction is supplied, shall in any circumstances be held liable for any inaccuracy or the consequences thereof.

PROCEDURE:

Fitting front mudflap:

1. Remove the nut, spring washer and screw fixing the steady stay to the front wing. Slacken off bolt fixing steady stay to scuttle.
2. Remove the central bolt fixing the dash support bracket to the chassis frame.
3. Secure the right- and left-hand mudflap assemblies to the side mudwing and chassis side as shown in Fig.1.

Fitting rear mudflap:

1. Position the right- and left-hand mudflap assemblies, by the retaining angle strip, to the underside forward lip of chassis frame rear cross-member outrigger, with the mudflap flush to the outer edge as shown in Fig.2.
2. Using the fixing holes of mudflap retaining angle strip as a template, drill 5 mm (3/16") diameter holes through the lip of outrigger.
3. Secure the mudflap in position, using bolts (2BA x 1/2"), spring washers and nuts (2BA).

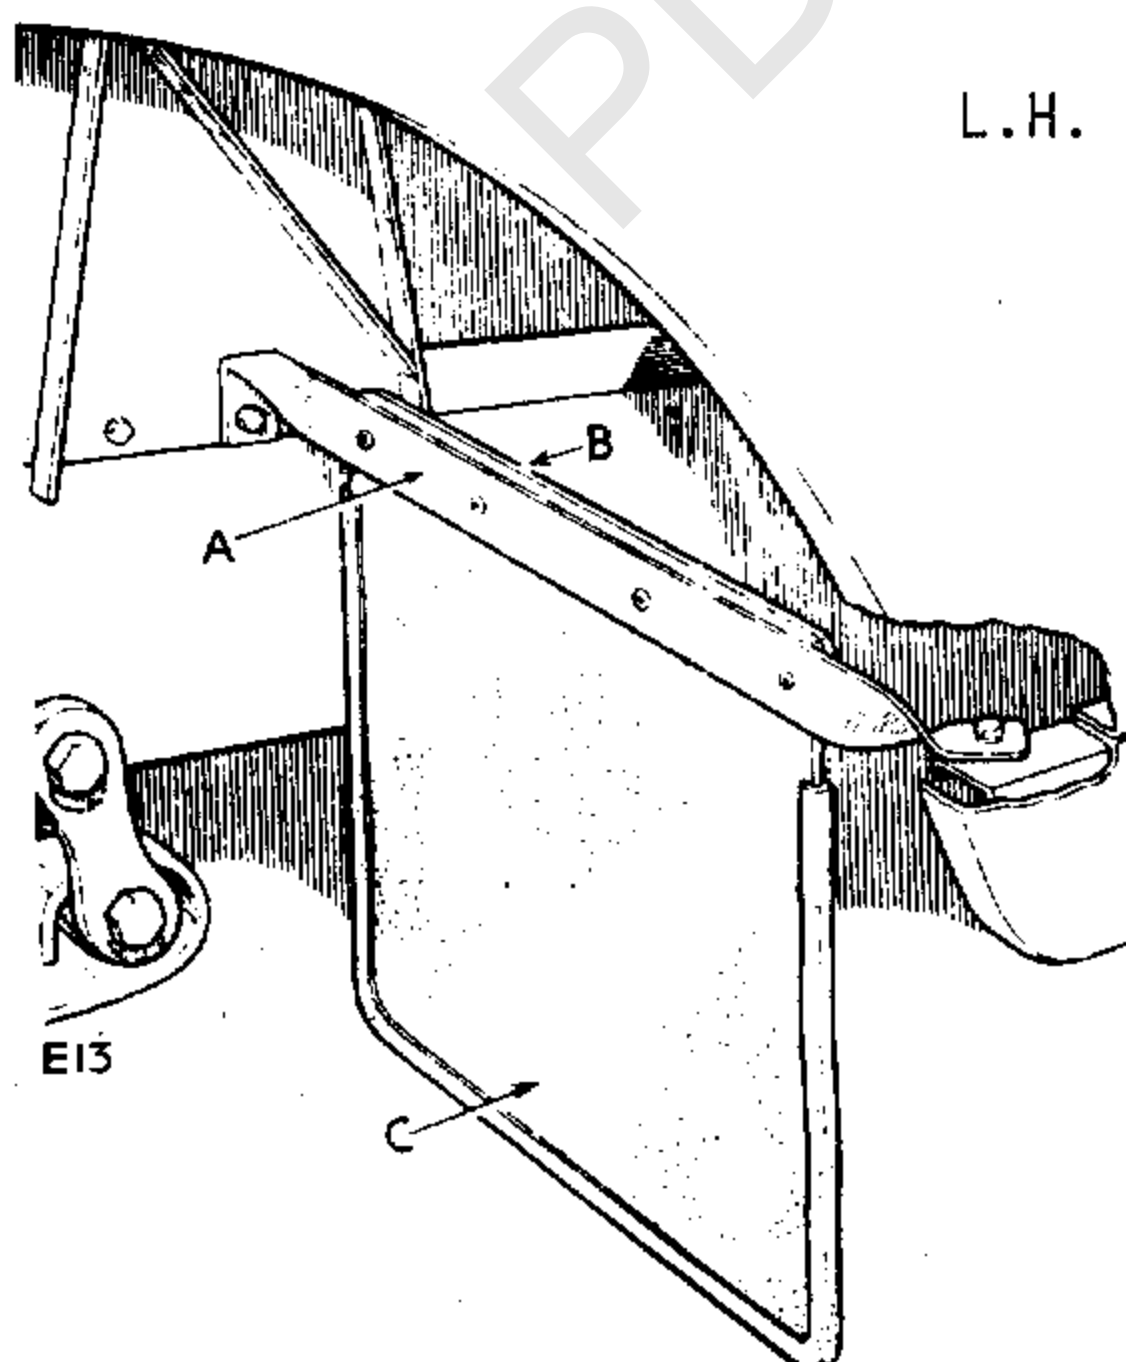


Fig. 1. Front mudflap in position

A—Support bracket  
B—Strengthening strip  
C—Mudflap

L.H. side illustrated

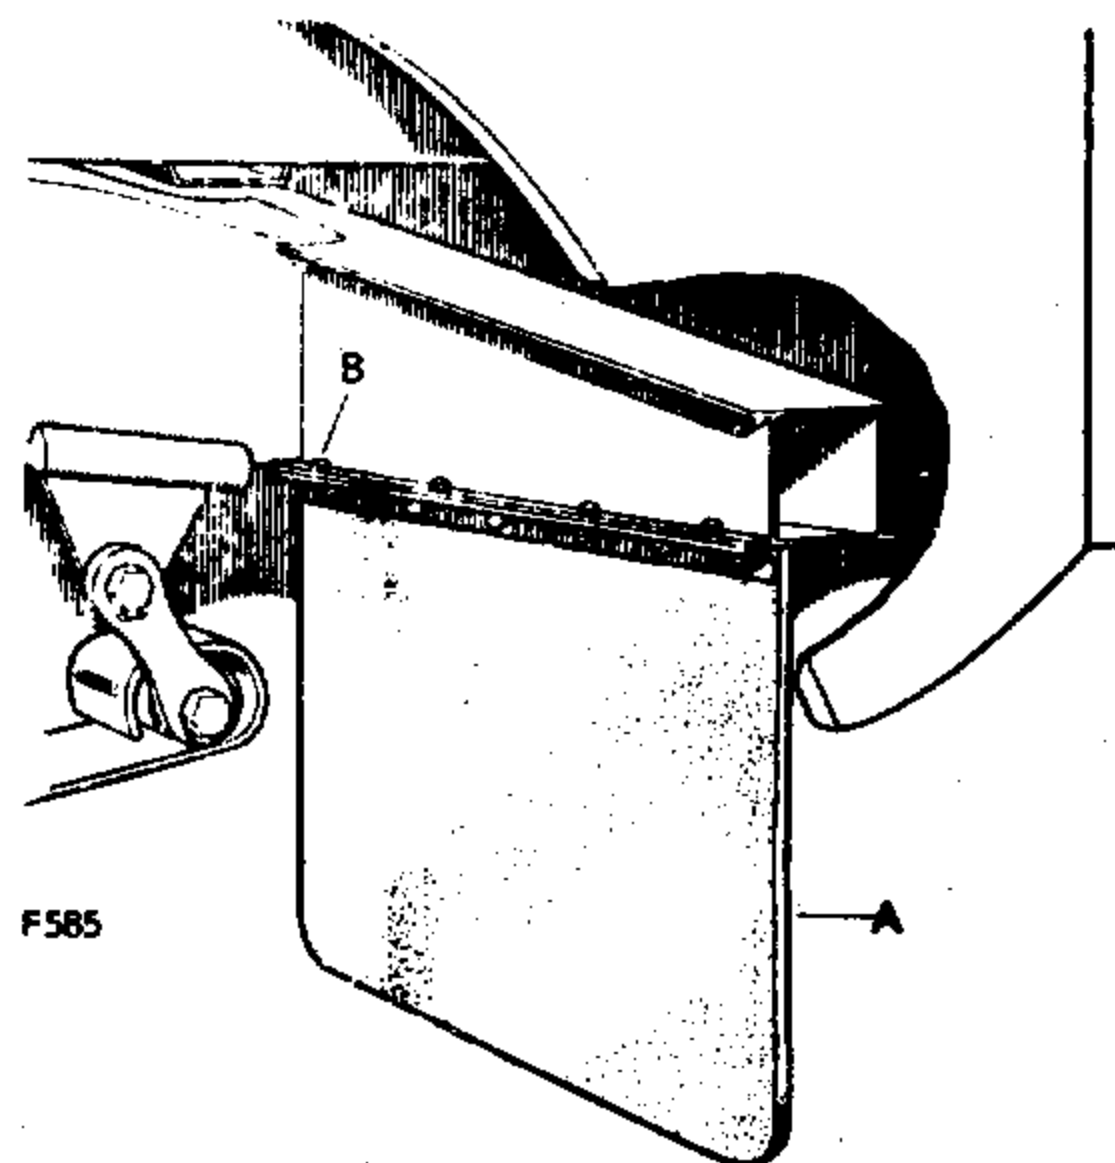


Fig. 2. Rear mudflap in position. Except 109 Station Wagon

A—Mudflap  
B—Securing bolts